

# CHRISTMAS CLOCK FACES

[www.NorthPoleChristmas.com](http://www.NorthPoleChristmas.com)



## Supplies:

Plastic Clock (Some of these clocks have plastic faces, while others have glass faces. You can find them at Walmart, Kmart or at many dollar stores)

FREE Clock Printable [Click Here For FREE Faces](#)

Cardstock

Scissors

Double Sided Tape

## Instructions:

1. Remove the cover from the clock. If it's a plastic cover, gently pry it off with a thin knife. The glass covered clocks are generally screwed on and are easy to remove with a screwdriver.

2. Measure the diameter of the clock face. These clock face patterns are 6 1/2". You may need to resize your pattern, depending on your clock.

3. To resize a pattern - Once you've selected your favorite clock face, save it to your computer and open it in a paint or graphic editing program like Photoshop. Edit it to match the size of your clock and try printing it out on plain paper to ensure you have the correct size.

4. Once you have it sized correctly, print out your new clock face on paper or card stock. Cut out the face and also cut out the small hole in the center (see black circle for placement) to accommodate the clock hands. (I use an ice pick to start the hole in the center, then make the hole larger by inserting a pen. Trim the excess paper.)

5. Now you will disassemble the clock face. Remove the hands from the center rod and lay them down in the direction and order they were taken off. You'll need to know how to reassemble them when you've replaced the clock face.



6. Remove the paper clock face that came with the clock. If your clock face was permanently glued to the body of the clock, just use the double sided tape to cover the existing face with your own new one.

7. Place double sided tape at the top, bottom and sides of the new clock face and carefully position it to align the numbers properly.



8. Reset the hands and replace the plastic cover. And voila, a brand new clock!

